



LumienLighting.com
orders@lumienlighting.com


LumeinFUEGO
RGBTW Modular Tiki Torch
(A9B2-7W-A)




Product
Specifications

CONSTRUCTION	Modular Construction: 1) Cylindrical Brass Oil Drum 2) RGBTW Interchangeable Module 3) QC Riser Adapter
LIGHT SOURCE	Wattage: 7W CCT: 2700K-5700K Voltage: 10-15V AC Delivered Lumens: 27K-57K: 189-222 Lm, R: 108 Lm, G: 239 Lm, B: 72 Lm Dimming: 0-100% via LumienPRO LP-REMOTE Beam Spread: 60°-120° via adjustable collar
FUEL CAPACITY	Holds 20 OZ. Approximately 10 hours burn time
WICK	Long lasting 3/4" round braided fiberglass (a replacement wick is included in the package.)

Dimension and Components

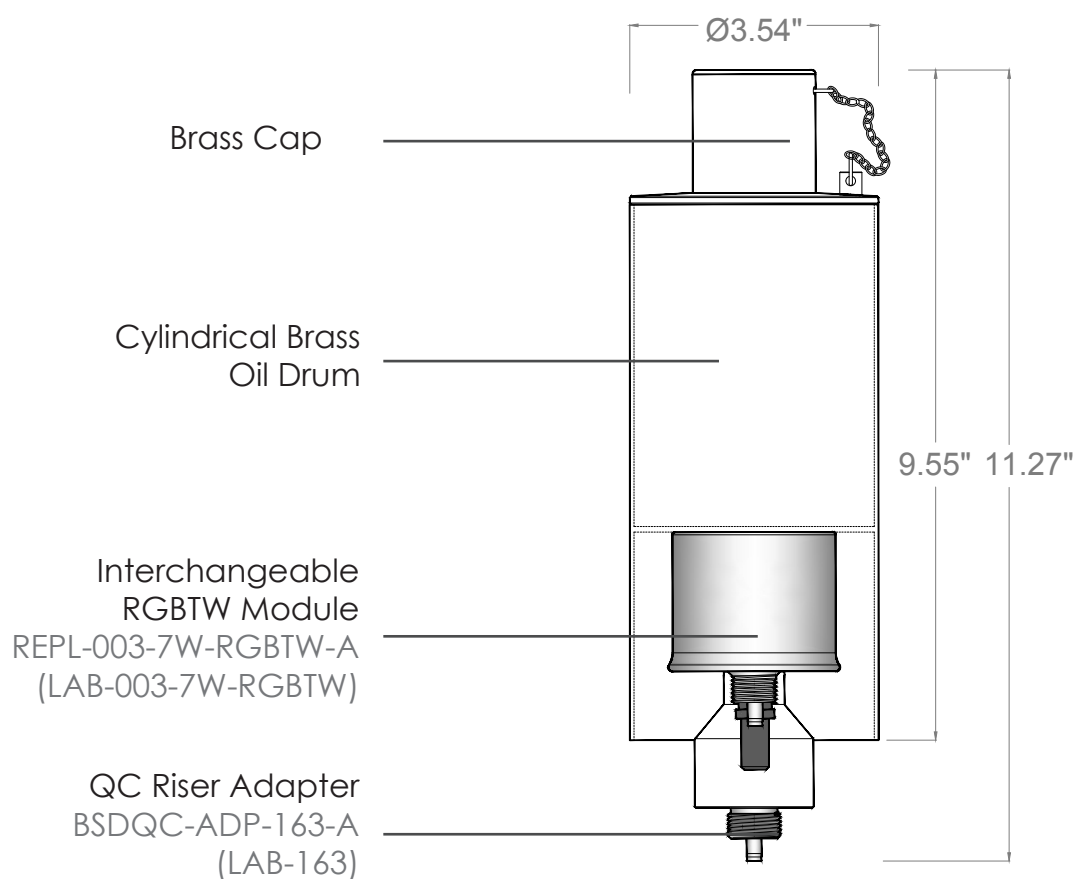


Accessory Guide

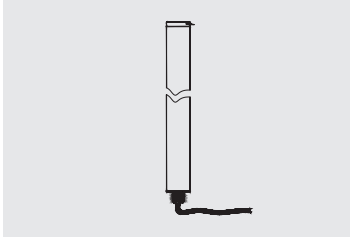

Brass - Antique, 48.5" Tiki Torch Riser, 1/2" Threaded, 6' Lead Wire

BFGO-STM-48-192-A
(LAB-192)

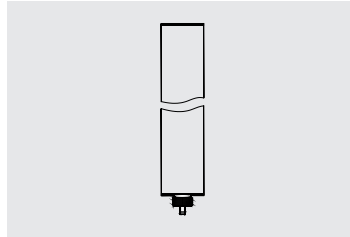


Brass - Antique, 4" Bollard Riser, Quick Connect

BQCU-BSTM-4-085-A
(LAB-085)

Brass - Antique, 14" Bollard Riser, Quick Connect

BQCU-BSTM-14-086-A
(LAB-086)


*Not for Use with LAB-192

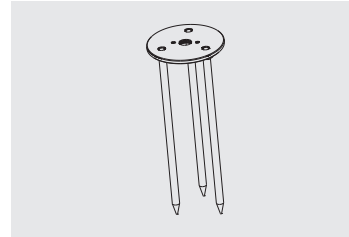

Stainless Steel, Trident Stake, 5" Plate with 12" Stakes, 1/2" Threaded

SSSD-STK-12-002
(LAS-002-12)


*With Use of LAB-192 Only

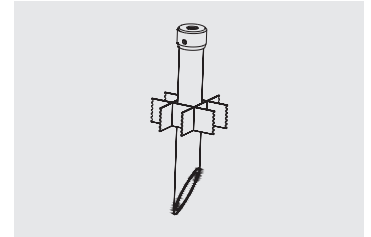

Plastic, 15" Commercial Spike, 1/2" Threaded

PSD-STK-15-005
(LAP-005)

*With Use of LAB-192 Only

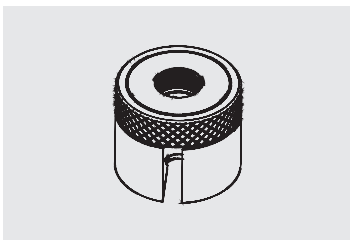


Brass - Antique, 52mm Junction Box, Quick Connect

BQCU-JBX-076-A
(LAB-076)

Brass - Antique, 127mm Junction Box, Quick Connect

BQCU-JBX-077-A
(LAB-077)

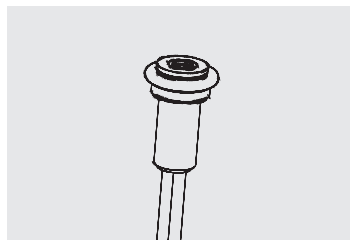

Plastic, 15'-100' Wire Lead, Quick Connect


PQCU-WIRE-15-015
(LAB-015)

PQCU-WIRE-30-015
(LAB-015L)

PQCU-WIRE-50-015
(LAB-015XL)

PQCU-WIRE-100-015
(LAB-015XXL)


*Not for Use with LAB-192

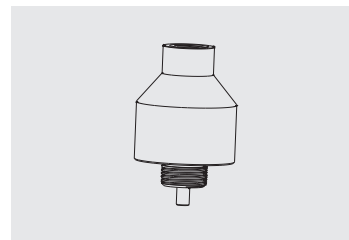

Brass - Antique, Adapter, Quick Connect Bollard to LAB-003

BSDQC-ADP-163-A
(LAB-163)

*Included

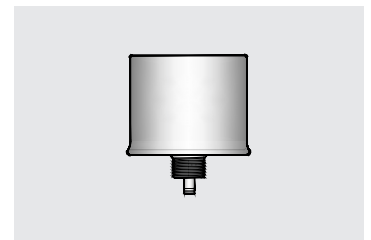

Brass Deco Path Replacement Module (27K, 30K, TW, and RGBTW)

REPL-003-4W-27K-A
REPL-003-4W-30K-A
REPL-003-8W-27K-A
REPL-003-8W-30K-A
REPL-003-7W-TW-A
(LAB-003)


REPL-003-7W-RGBTW-A
(LAB-003-RGBTW)

*Included


*Not for Use with LAB-192

Installations

Accessories are not included in the package. Order separately.

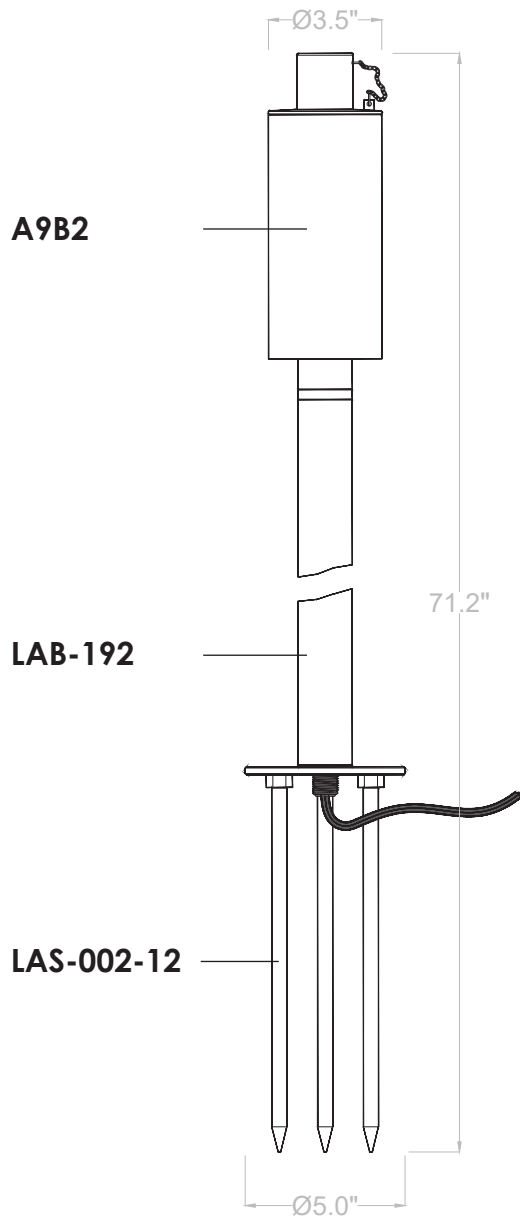


A: A9B2 + LAB-192 + LAS-002-12

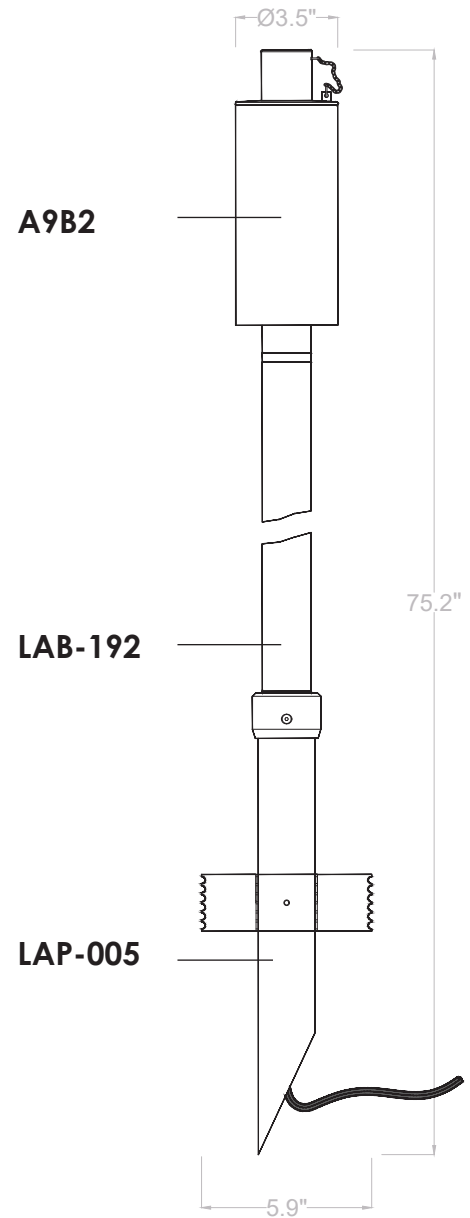


B: A9B2 + LAB-192 + LAP-005

Surface Mount Installations

Accessories are not included in the package. Order separately.

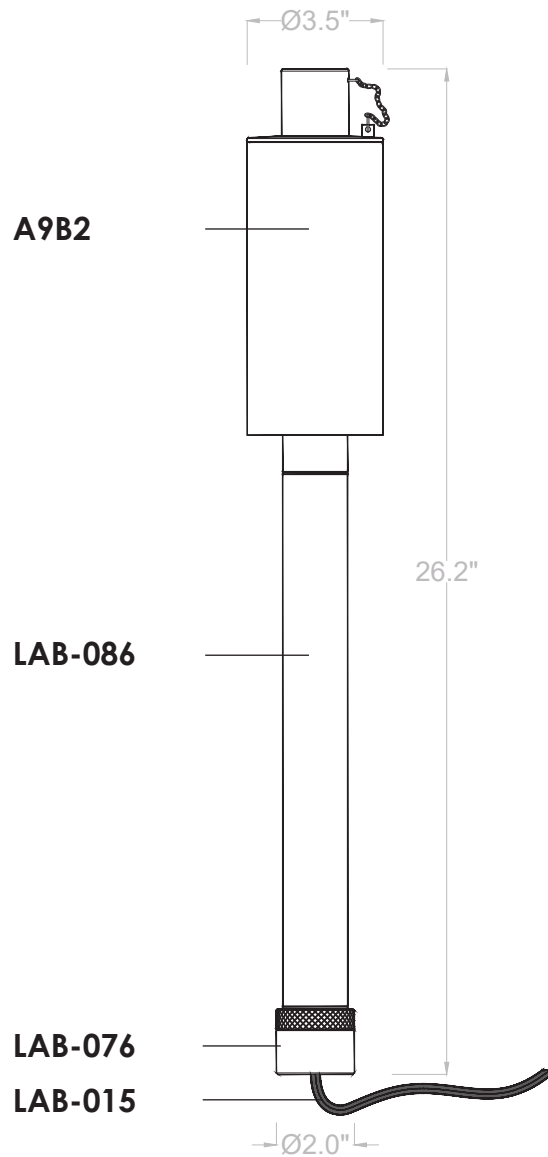

C: A9B2 + LAB-086 + LAB-076 + LAB-015

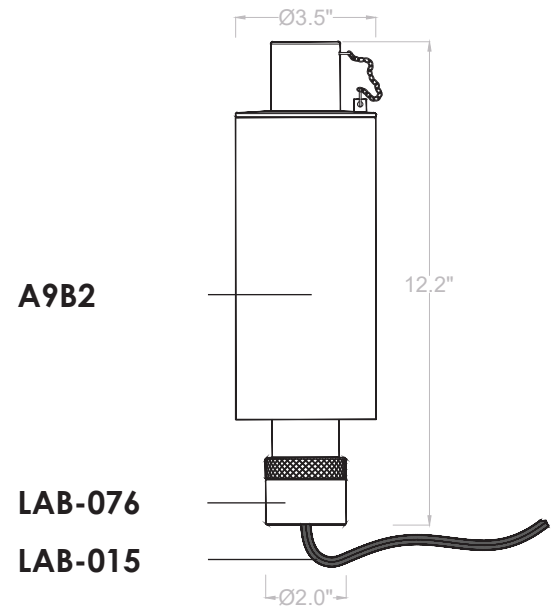

D: A9B2 + LAB-076 + LAB-015

Warnings

- Do not touch the torch or any metal components while the flame is burning or until the unit has cooled completely. Contact with hot surfaces may result in burns.
- Keep the torch away from flammable, combustible, or explosive materials during use.
- Do not light or operate the torch during storms, high winds, or other severe weather conditions.
- Extinguish the flame and place the snuffer cap over the wick when the torch is not in use.
- When refilling fuel, avoid spilling or dripping oil onto the exterior surface of the torch. Clean any spills immediately to help prevent surface damage or corrosion.
- Refill the torch only when the flame is extinguished and all components have cooled completely.